
Toyota Genuine

Multi Remote Control

Toyota Part Number: **08540-00176**

Instruction Manual

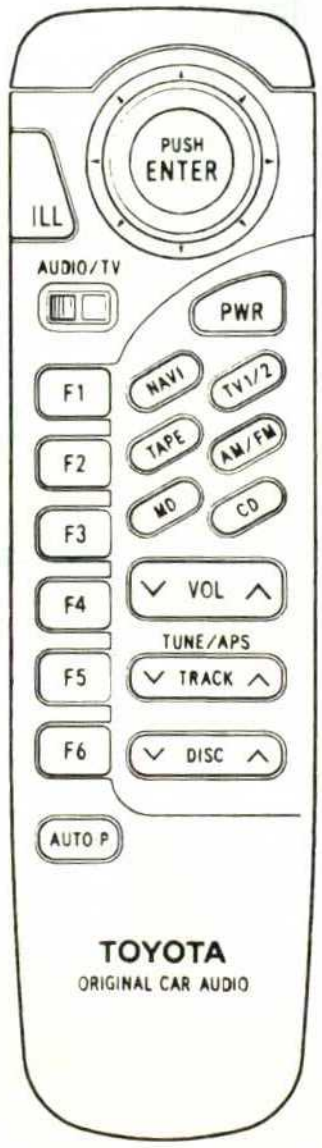

Thank you for purchasing the Toyota Genuine Multi-Remote Control. Please be sure to read this manual before use and operate the device correctly according to the instructions provided.

Please keep this manual in your car so that it will not be lost.

When transferring this product to another customer, please be sure to hand over this manual as well.

Toyota Motor Corporation

This manual uses the following symbols to indicate "possible hazards to the driver or others" and how to avoid them. These are important for safety, so please be sure to read and follow them.

△ Caution	If the instructions are not followed, there is a risk of injury or accident.

Important points to observe for your vehicle and useful information are indicated by the following symbols.

Knowledge	Useful Things to Know Things We Would Like You to Know

● This manual explains how to operate the multi-remote control. Please read it together with the vehicle's main manual.

Table of Contents

Next

Remote Control Operation

Point the remote control's light-emitting part toward the TV (audio) remote control receiver and operate it.

△ Caution

For safety, the driver should not operate it while driving.

Do not operate while driving.

Knowledge


If the remote control does not work unless it is close to the remote sensor, please replace the batteries.

If direct sunlight hits the remote sensor of this device, remote control operation may become impossible. In this case, please block the direct sunlight to the sensor before operating. Do not drop or get the remote control wet.


Do not place the remote control in locations exposed to direct sunlight or in places with high temperatures. Also, avoid placing it in dusty or humid areas.

How to Insert the Battery

1 Open the cover




2 Insert the battery



Insert the included AA batteries as shown in the diagram, paying attention to the polarity. *Do not use rechargeable (Ni-Cd) batteries.

3 Close the lid




National Neo (Black) AA alkaline batteries can be used for about 6 months (at room temperature).

△ Caution

Precautions for Battery Use

To prevent battery rupture or leakage, please observe the following:




- Do not mix different types or new and old batteries.
- Batteries cannot be recharged. Do not
- short-circuit the positive and negative terminals.
- Do not disassemble.
- After use, do not mix batteries with combustible waste or burn them.

If the remote control does not work

- Is the battery polarity correct?

The operation of each button on the remote control is the same as the operation of the corresponding buttons on the combined device.

(For instructions on how to operate each button, please refer to the manual of the combined device.)



1. Illumination Switch

Pressing the illumination switch lights up the remote control's operation buttons for about 6 seconds.

2. Audio/TV Switching Switch


・Switches the functions of the function buttons (F1~F6).

When set to the AUDIO side, the buttons 1~6 correspond to the same function buttons as the combined audio (remote control compatible models of accessory audio).


When set to the TV side, the buttons F1~F6 correspond to the same function buttons as those displayed on the TV screen.

(Except for IDIN TV-4)


When operating the radio (excluding audio systems with a line input)




When operating the tape (excluding line-equipped audio)




When operating the CD



When operating the MD




When operating the TV



■ When using the 1DIN TV 4, please switch the audio/TV selector switch to the audio side.

When operating the navigation system

Operation is possible when an optional navigation system is installed.



About after-sales service

1. This product comes with a warranty card.

   The warranty card must be received at the retailer, and the "retailer name, purchase date," and other details must be filled in.

   Please check the contents upon receipt and keep them carefully.

2. If the multi-remote control is malfunctioning, please request repairs as follows.

   ◆ During the warranty period, please bring the product along with the warranty card to the retailer where you purchased it.

   Repairs will be carried out free of charge based on the warranty terms stated on the warranty card.

   ◆ If the warranty period has expired, please consult the retailer where you made the purchase first.

   We will undertake repairs for a fee at the customer's request.

3. Replacement performance parts (parts necessary to maintain functionality) for this product will be kept for at least six years after production is discontinued.

4. If you have any questions about after-sales service or other matters, please contact the retailer where you purchased the product.

Distributor

Toyota Motor Corporation

090002-1939A700
9604MT(K)